

Turn On


1.) Turn the PathPilot Power Strip Switch On



2.) Turn the Tormach Main Disconnect On



3.) Twist the Emergency Switch Stop Button & Press the Green Button

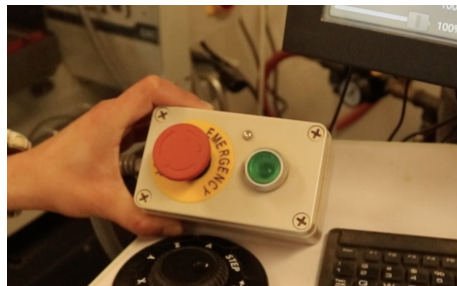

4.) Press the Reset Button



Turn Off

1.) Press the Emergency Button Down



2.) Press Exit in the PathPilot Software & Wait for ↓ Screen ↓ to Pop Up



3.) Turn the PathPilot Power Switch Strip Off



4.) Turn the Main Disconnect Off

